

## Replacing Casters Instructions

Tool required:  $\frac{3}{4}$  inch open end wrench



First, slowly lay the lift on its side to see under the caster



The wrench can only be in contact with the nut when it is at an angle



Turn the wrench counter clockwise (to the left) to loosen



Once the nut is removed, remove the old caster.



Install the new caster



Insert the washer if available



Insert and hand tighten the nut a few turns



Turn the wrench clockwise (to the right) to tighten the nut all the way



Slowly lay the lift on its other side and repeat for the other caster